

Instruction Manual

READ AND SAVE
THESE INSTRUCTIONS

OPERATION
SAFETY
SERVICE
WARRANTY
CONTACT
SPECIFICATIONS
TROUBLESHOOTING

GRIZZLY

GP-1 ETL

1HP



POWERFUL



25 FOOT
CORD



3 SPEEDS

IDEAL FOR

PET INDUSTRY

INFLATABLE INDUSTRY

WATER DAMAGE RESTORATION



Introduction to Grizzly GP-1-ETL

Your new B-Air Grizzly GP-1-ETL blower and dryer has a 1 HP high-efficiency motor with the following features:

- State-of-the-art construction
- Safety screens on open vents
- Easy-to-use carrying handle
- A kick stand, which allows for added height, when needed.
- 3-speed switch

Operation/Use

This high-air volume blower is intended to dry, inflate and move air. It is suitable for a variety of applications.

- A) Carefully place the Grizzly B-Air unit on a stable, flat and dry surface during operation.
- B) Use free standing or with attachments
- (1) The Grizzly B-Air unit can be positioned to aim airflow across flat surfaces or it can be angled upward. Raise or lower the attached stand for higher adjustment.
 - (2) Pet Drying - attach the den drying kit for multiple cage drying.
 - (3) Inflatables - attach an inflatable tube around the exhaust opening using straps, velcro or any other form of tightener.
- C) Turn on the switch to desired speed and make sure it is operating correctly.
- D) All blowers/dryers in operation must be supervised at all times.

3-SPEED MAIN SWITCH

CARRYING HANDLE

AIR INTAKE

AIR OUTLET

KICK STAND



Warning

All blowers in operation must be supervised and attended to, at all times. The use of a 3-prong to a 2-prong adapter is prohibited; use only a 3-prong adapter.

If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid a hazard.

Storage

Store unit indoors, in a clean, dry environment to ensure long life.

Safety

- 1) Keep children and pets away from unit when in operation and/or plugged in.
- 2) Do not put fingers or other objects in unit while in operation and/or plugged in.
- 3) To avoid electric shock, do not operate in pooled water.
- 4) Unit must be kept dry at all times, including motor, wiring and exterior. If unit becomes wet, thoroughly dry before next operation.
- 5) Indoor use: Use only with a grounded plug and/or extension cord to avoid risk of electrical shock or fire. Remember to never use a cord with any kind of damage or wear.
- 6) Make sure the power source is sufficient to meet the requirements of the dryer/air mover.
- 7) To prevent overheating the unit, keep air intake clear at all times.
- 8) Clogging or blocking the air intake could result in a fire or an electrical hazard.
- 9) In order to avoid injury, do not remove any screens or safety guards from the unit. Prevent objects from coming in contact with the dryer's wheel. If the unit is damaged in this manner, it will void your warranty.
- 10) Do not operate unit close to any hazard/dangerous areas: explosive gases, flammables, heaters and unventilated environments to avoid explosions or electrical hazards.
- 11) Do not use any form of speed control device; doing so may cause fire or injury.
- 12) Always place dryer/air mover on a smooth and level surface for safe operation.
- 13) Do not use unit if damaged.
- 14) Unplug unit before cleaning or servicing.
- 15) All dryers/air movers in operation must be supervised at all times.
- 16) Do not expose to rain, water or snow.
- 17) Unit must be connected to a GFCI (Ground Fault Circuit Interrupter) protected receptacle.

Warning!

All dryers/air movers in operation must be supervised and attended to, at all times. The use of a 3-prong to a 2-prong adapter is prohibited; use only a 3-prong adapter.

If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid a hazard.

Limited Warranty

Proof of purchase is required on all warranty claims.

2-year warranty

B-Air will cover all parts (except power cord) within two (2) years of purchase. B-Air will pay repair costs and one-way UPS ground service shipping to your location within the 48 contiguous states. Proof of purchase is required.

Customer is responsible for shipment of damaged unit to B-Air warehouse for repair. Canada and non-contiguous states must pay freight both ways.

5-year warranty

B-Air will cover housing from date of original purchase. Proof of purchase is required.

Grizzly B-Air Limited Warranty

What's covered

- 1) Grizzly B-Air dryers/air movers are covered against defects in material and craftsmanship under normal intended use to original purchaser for a term of two (2) years from the original date of purchase (parts, labor and shipping included).
- 2) The Grizzly B-Air dryer/air mover housing is covered for a term of five (5) full years from date of original purchase.

Does not cover

Any signs of misuse including (but not limited to) rough handling, abuse, tampering, improper voltage use and unauthorized maintenance and repairs.

Service

In order to receive service or replacement parts under warranty, you must:


 
 



















- 1) Call for an RMA (Return Merchandise Authorization Number) at B-Air.
 - 2) Have proof of purchase.
 - 3) Ship the blower to B-Air.
 - If immediate service is required, B-Air will ship a refurbished dryer/air mover immediately to replace unit requiring service. However, a valid credit card should be provided and charged. Once we receive your dryer/air mover, we will credit your credit card account.
 - We will gladly repair your dryer/air mover and ship within 24 hours.
- Upon inspection, we will advise you of the repairs needed and the cost (if applicable). B-Air will issue repair or replacement parts depending on warranty.


Cords

- 1) Do not use extension cords for outside use.
- 2) Use 3-prong adapters that are UL and CE-approved and not less than 14-3 with ground fault circuit interrupter (GFCI).
- 3) Do not use cords that show any kind of wear or damage.
- 4) Cords are not covered by warranty.

GP-1 ETL

Parts List

1. Housing		X1
2. Motor		X1
3. Fan		X1
4. Air Exhaust Grill		X1
5. Air Intake Grill (M)		X1
6. Air Intake Grill (F)		X1
7. Air Guide Blade		X1
8. Capacitor		X1
9. Fastener Clip		X2
10. Switch		X1
11. Switch Knob		X1
12. Switch Cover		X1
13. Rivet 4x16mm		X13
14. Rivet 5x19mm		X8
15. Screw 3x10mm		X4
16. Screw 4x16mm		X8
17. Screw 4x12mm		X1
18. Screw 6x16mm		X4
19. Rack Feet		X2
20. Rack Tube		X2
21. Cord Connector		X1
22. Position Rack		X1
23. Rubber Feet		X1

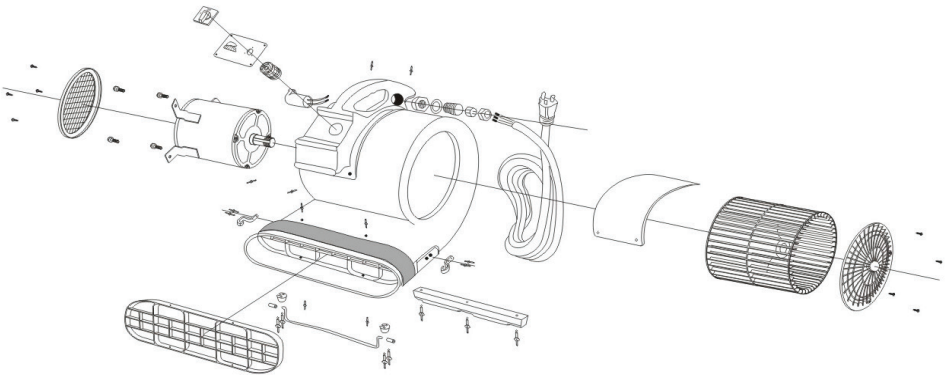

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Motor Not Running	a) Switch is OFF b) Bad Outlet c) Faulty Switch/Cord	a) Turn Switch ON b) Check Outlet / Change to Another Outlet c) Call Factory for new Switch/to replace Cord
Scraping noise from blower	a) Wheel out of line	a) Call Factory for Replacement Advice
Weak air flow	a) Obstructed vents/inlets	a) Clean out vents/inlets

SPECIFICATIONS

Motor 1 HP

Amps L 8.7A / M 9.2A / H 10.6A

Max Air Volume 3550 CFM

Speeds 3

Certification C-ETL-US

Voltage 115V

Cycle 60Hz

Max Static Pressure 3.1"

Weight Net 39 Lbs (43 Lbs with box)

Size (LxWxH) 19" x 18" x 19.5"

Wheel Speed (RPM) L 1300 / M 1440 / H 1720

Attached Cord 25' (FT)

Available Colors Green, Black, Turquoise

*Thank you
for your purchase.*



Warranty Registration

ONLINE

Please fill out and submit your warranty form at:

www.b-air.com/register



BY MAIL

Please complete, mail or fax your product registration card.

For multiple units, please list serial numbers on a separate sheet.

This warranty card and your bill of sale must be presented for warranty service.

Company name _____

Contact name _____

Title _____

Street address _____

City _____

State _____

Zip _____

Phone _____

Fax _____

Email _____

Product serial number _____

Date of purchase _____

Purchase from _____



550 South Ayon Ave. Azusa, CA 91702
1-877-800-BAIR (2247)
Fax: (626) 385-3307
Email: info@b-air.com
Website: www.b-air.com



SENDER
ADDRESS
HERE

AFFIX
STAMP
HERE

MAIL TO
B-Air
Warranty Registration
550 South Ayon Ave
Azusa, CA 91702